


AC Voltage Adjust Board Change-Over Procedure

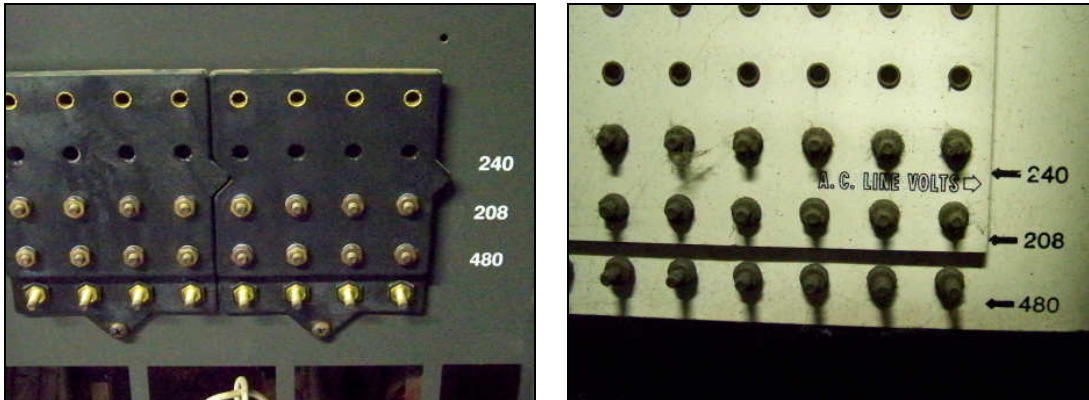

Caution: Before working on any battery charger always remove AC power source and ensure the battery is disconnected to prevent damage or electrical shock.

1. Remove the nuts from the studs (bolts).
2. Pull off the outside plates.
3. Adjust the outside plates so the pointer or arrow points to the appropriate AC voltage required.
4. Slide the outside plates back over the studs.
5. Fasten the nuts back on the studs (bolts).
6. AC voltage change-over is complete.

Note: The AC fuse size is determined by the AC current draw. When changing the AC input voltage the AC fuses will need to be changed to an appropriate rating.